


How to Install 3-Inch Fascia and 4-Inch Fascia

Getting Started

A few simple tools are required:

- Steel tape measure
- Power drill and drill bits (if desired)
- Flathead and Phillips screwdriver
- Pencil
- Level
- Awl (or tool for starting a screw hole)


Included in your order is all the hardware necessary for a normal installation. Depending on the mounting surface, fasteners other than the screws provided may be required. Wall board and plaster require the use of anchors such as expansion brackets or toggle bolts. Brick, tile, and stone need special plugs and drill bits. Wood should always be pre-drilled to avoid splitting.

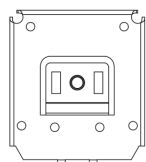

3" Fascia Bracket



Screws

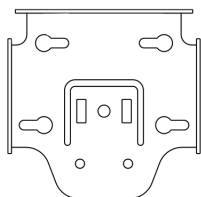

4" Fascia Bracket


PLEASE READ INSTRUCTIONS ENTIRELY BEFORE ATTEMPTING TO INSTALL.

Inside Mount, Ceiling Mount or Partial Inside Mount

Important: Level mounting is essential for proper shade installation.


Install brackets for either ceiling mount, insidemount or partial inside mount.

3" Fascia Bracket installation requires holding the mounting bracket in position in the window and mark the location where the screws should be positioned.

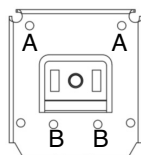


Hold the mounting bracket in position in the window and mark the location where the screws should be positioned in both A & A locations and B & B locations.

4" Fascia Bracket installation requires holding the mounting bracket in position in the window and mark the location where the screws should be positioned.

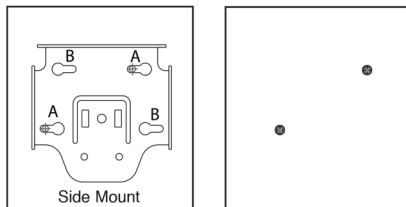

1. Hold the mounting bracket in position in the window and mark the location where the screws should be positioned in either both A & A locations or B & B locations.

2. Partially screw in both screws where marked with appropriate anchoring system.

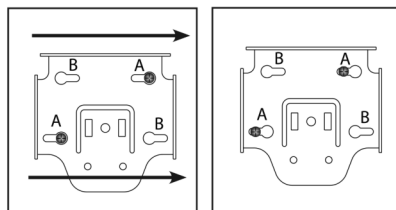


3. Slip the mounting bracket over the two screws and slide the bracket sideways until the screw heads capture the bracket.

4. Fully tighten these screws.

Attaching 4" Fascia:


NOTE: 4" fascia for use with SL-30 and SLG-400 requires notching.

SL-30, SLG-400 (only) Fascia Notching

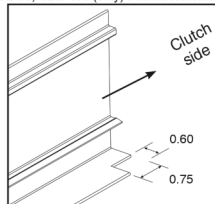

Fascia may be cut to the exact desired width, no deductions are required to accommodate brackets, etc.


1. Hook the fascia on the top of bracket first and rotate downward. 2. While pressing the panel towards the bracket, grab the "L" and pull downward on it until the hooked feature on the fascia engages and is locked to the bracket.

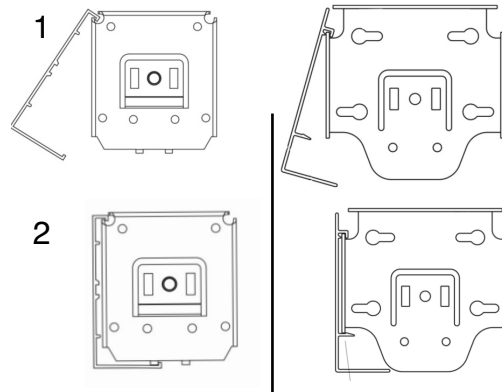

Attach fascia by hooking the lip of the long side of the fascia panel onto the top front tab of the bracket (1). Swing the fascia panel down over the front of the bracket and firmly press the lip of the short side of the fascia panel until the fascia engages the tab on the bracket (2).

If ceiling mount, the fascia panel should be installed before the bracket is fully tightened down. Once the fascia and bracket are securely fastened in place, install the shade.

Install the clutch end first and then the idler end.

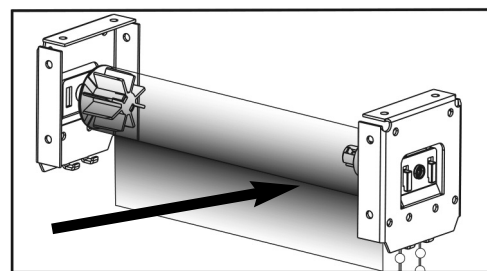

Support during installation

Be certain to support the clutch end of shade as the idler end is installed. The shade should not be supported by the clutch alone as this could cause damage to the clutch. If shades are large, it is recommended that additional installers are available to help with installation.

The shade should be lowered and raised to confirm smooth operation including proper setting of stops.

Outside Mount or Open Wall Mount

Install brackets as required using proper fasteners and anchors. Then the shade should be installed. Install the clutch end first, and then the idler end. Be certain to support the clutch end of the shade as the idler end is installed.

The shades should never be supported by the clutch alone as this could cause damage to the clutch. It is recommended that additional installers are available to help with installation.

Upon installing shades, operate them to confirm smooth operation.

Tension devices should be properly installed. Attach fascia by hooking the lip of the long side of the fascia panel onto the top front tab of the bracket (as shown in middle panel). Swing the fascia panel down over the bracket and firmly press the lip of the short side to the panel until the fascia engages the tab of the bracket.

Safety Tension Device Install Device

The safety tension device is already installed, in the locked position, on the chain or cord of the product.

Product will not operate until safety device is installed properly.

To install:

1. Pinch together the loops of the device to open allowing the chain or cord to move freely.


2. Pull the device downward to apply tension on the chain or cord. If a chain, pull tight enough but also allowing the chain stop to run through the device.

Mark the mounting surface where the screw should be. Pre-drill screw hole. Install wall anchor, if needed.


3. With device pinched together, mount to wall by running the 1-1/2" #6 non-threaded shank pan screw, provided, through both legs of device.




#6, 1-1/2" non-threaded shank pan head screw, and hollow wall anchor, included

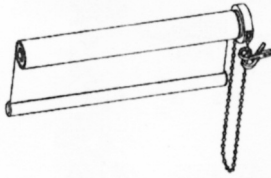

Safety tension device in locked position on chain or cord of device prior to product installation.

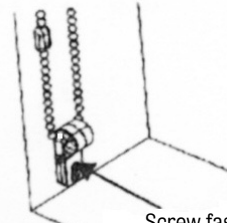

Safety device installed correctly allowing free movement of chain or cord.

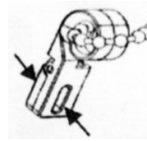

Screw fastening down both legs of device.

On drywall surface, install the wall anchor provided.

On wood surface, use wood screw (not provided).

On metal surface, use metal screw (not provided).

DANGER STRANGULATION HAZARD

- Keep cords out of the reach of children.



- Move cribs and furniture away from cords.



- Remove objects below windows.



- Loops will appear when the shade is in the raised position.



- Do not tie cords together.



- Install a cord tensioner or cord cleat.



EMERGENCY FIRST AID FOR STRANGULATION.



- Remove cord from child's neck
- Call 911 or Emergency Center
- Clear throat
- Check breathing and heart beat
- Begin CPR